
Color QUAD System

User's Manual

All rights reserved.

No part of this book may be reproduced, in any form or by any means, without permission in writing from the publisher.

Disclaimer

Techwell Inc. has made every reasonable effort to ensure that all information in this document and all operation in this system are correct. We assume no responsibility for any inadvertent errors in this document and system.





 
System Features

- Connects up to 4 Video Camera
Adjustable Brightness, Contrast, Saturation, Hue and Sharpness
- High Resolution
720X480 60Hz for NTSC
720X576 50Hz for PAL
- Various Display Mode
 - QUAD Split Mode
 - Full Screen Mode
 - PIP Screen Mode
 - 1 PIP Screen Mode
 - 2 PIP Screen Mode
 - Auto Sequence Mode
- High Performance Freeze Function
Flicker Free Image Captured
- High Performance Zoom Function
Selectable Zoom Area
- Various Overlay Information
 - Camera Title
 - Real Time and Date
 - Alarm/Loss/Motion Message
- Provide Various Event Input
 - Video Loss Detection
 - Motion Detection
 - 60 Event Report
 - Built-in Buzzer


Power Jack Connection

DC 12V/2A, 2.1mm Jack, Center is positive.

Key Definition



Short Key
Press for less than 1 second

 

Long Key
Press for more than 1 seconds

Invoke SETUP Menu




Reference Setup Menu Operation.



Setup menu

Invoke FREEZE Function

All channel images enter freeze status when freeze function is invoked. Zoom function can be invoked while freeze function is running.

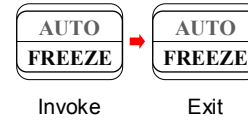

Invoke AUTO SEQUENCE Function


AUTO key invokes auto sequence display mode.



Auto sequence


Change DISPLAY Mode

The display modes are circulated as QUAD, PIP1 and PIP2 with pressing each MODE key.

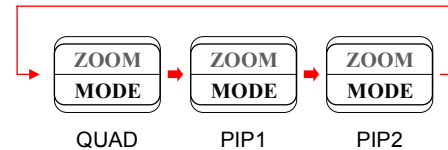


Select full screen for PIP1 and PIP2 display mode

The first long channel key for PIP1 and PIP2 mode defines out picture channel and the second, third and fourth long key define in picture channel.

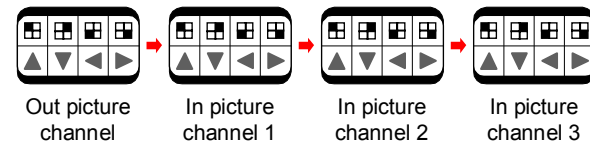

Invoke 2X ZOOM Function

 A zoomed area can be moved by pressing 4 arrow keys anytime when zoom function is invoked. Freeze function can be executed while zoom function is running.




Invoke


Exit

Select SINGLE SCREEN CAMERA

 
4 channel keys select camera to be display as full screen.




Camera 1

 

Camera 2

 

Camera 3

 


Camera 4

Select PAL/NTSC SYSTEM


System can be defined by pressing each channel key when the power switch is turn on.

 Connect Power Cable



PAL

 Connect Power Cable



NTSC

Setup Menu Operation

The system provides GUI setup screen. Each menu screen is separated into three parts. Screen title is displayed in upper region and menu items are located in middle of screen. The key function is described in lower region.

SETUP MAIN MENU




SYSTEM SETUP MENU




FACTORY RESET MENU



DISPLAY SETUP MENU

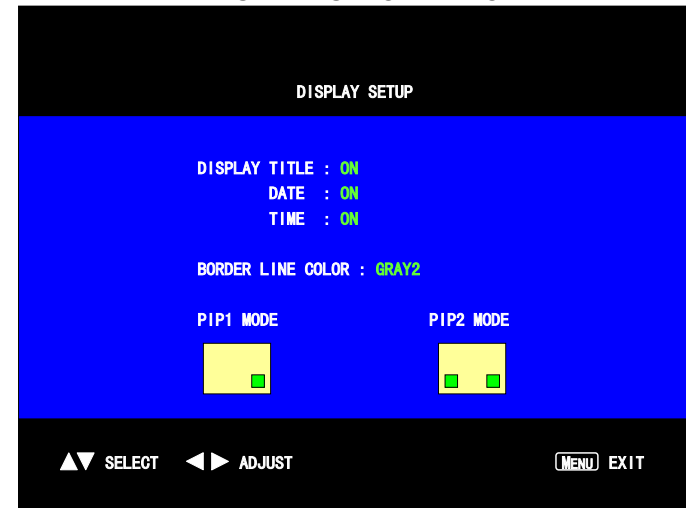

CAMERA SETUP MENU

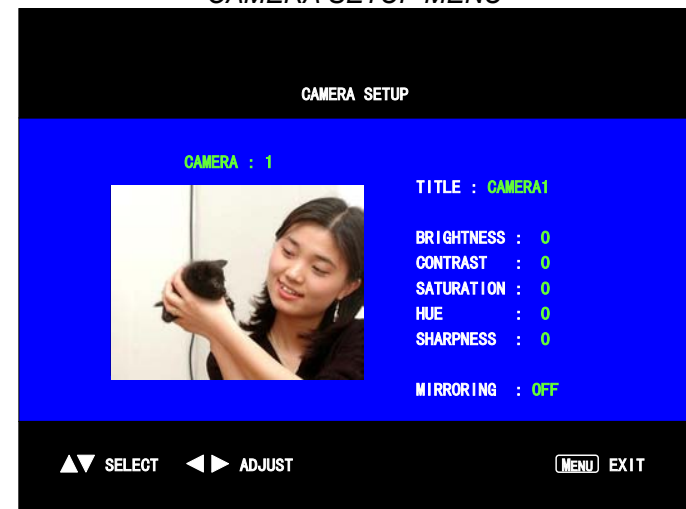

AUTO SEQUENCE SETUP MENU

AUTO SEQUENCE DWELL TIME

PAGE A QUAD : 3 SEC
CAMERA1 : 3 SEC
CAMERA2 : 3 SEC
CAMERA3 : 3 SEC
CAMERA4 : 3 SEC

▲▼ SELECT

◀▶ ADJUST

EXIT EXIT

MOTION SETUP MENU

MOTION SETUP

CAMERA : 1



DETECTION TIME

ALWAYS OFF

ON : 11:00:00

OFF : 12:00:00

SENSITIVITY : 0

VELOCITY : 0

MASKING AREA

[X, Y] = (0, 0)

▲▼ SELECT

◀▶ ADJUST

⏏ MENU EXIT

EVENT SETUP MENU

EVENT SETUP

BUZZER/REPORT ? CONTROL

CHANNEL	1	2	3	4
ALARM				
LOSS				
MOTION				

BUZZER HOLD TIME : 05 SEC

REPORT HOLD TIME : 60 SEC

▲▼◀▶ SELECT

ENTER ENABLE

EXIT EXIT

EVENT REPORT

EVENT REPORT

1 OF 6 PAGE

ID	YY-MM-DD	HH:MM:SS	CH	EVENT
1	04-07-30	16:56:08	1	LOSS
2	04-07-30	16:56:08	2	ALARM
3	04-07-30	16:56:08	3	MOTION
4	04-07-30	16:56:08	4	LOSS

▲▼ PAGE

EXIT EXIT

